


PARTS BAG **UPC# 1402A** **96 Pocket "X" Spinner**



PART	Quantity	Reference
Ratchet Rivets (16 extra)	112	A
Card Clips (8 extra)	56	B
Sign Holder	2	C

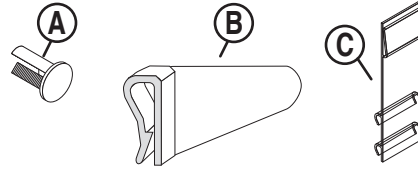

TOOLS REQUIRED: #2 Phillips Screwdriver

PARTS LIST

PART	Quantity	Reference
Wire Grid Top	1	D
Wire Grid Bottom	1	E
Spinner Plate	1	F
Racks	24	G

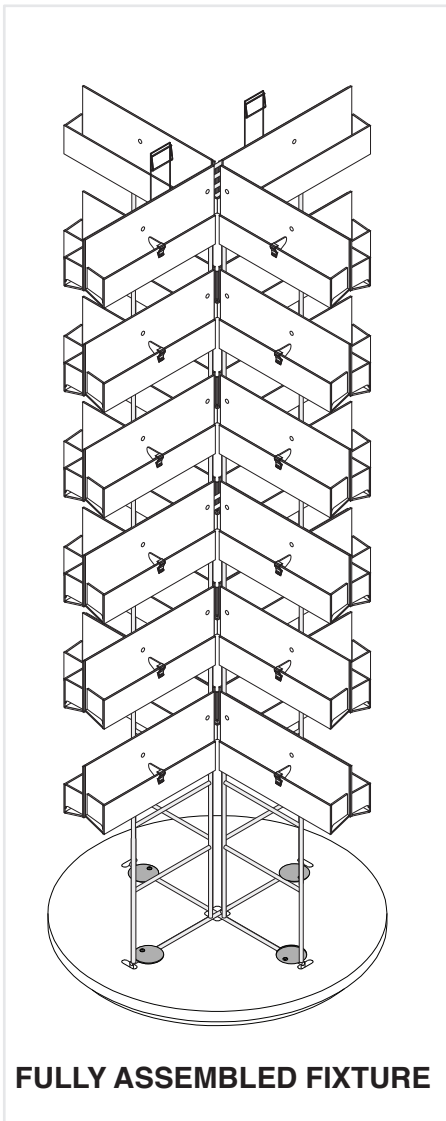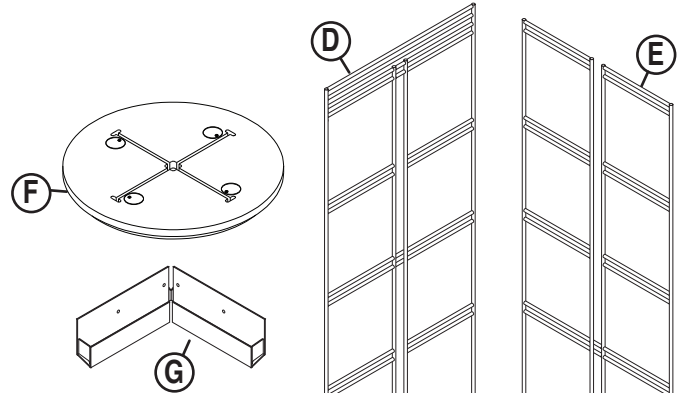


FULLY ASSEMBLED FIXTURE


If you have any questions or need replacement parts, please call:
UPC Customer Service
 1-800-859-7442
Design & Manufacture

ASSEMBLY

- 1** Assemble Wire Grids by sliding **Grid Top (D)** down onto **Grid Bottom (E)**.

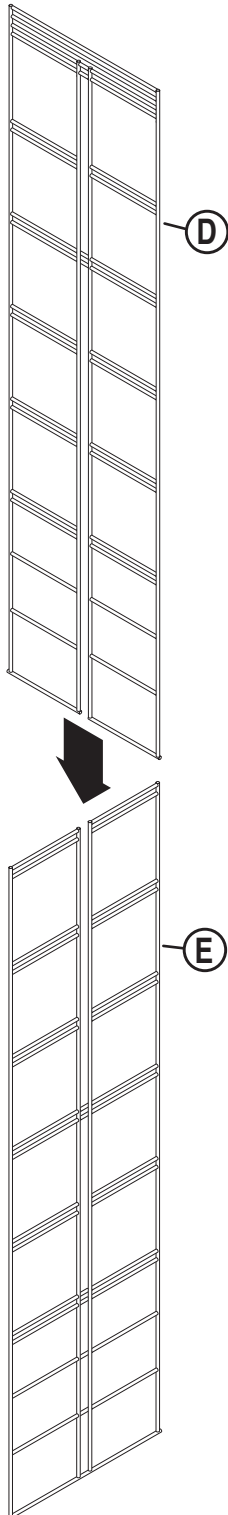

- 2** **SECURING GRID TO BASE:**
Set **Assembled Wire Grid (D&E)** down into Channels in **Spinner Plate (F)**.
Loosen screw on (4) Metal Discs.
Swing Metal Discs over grid in Channels.
Tighten screws to lock Discs over Grid.

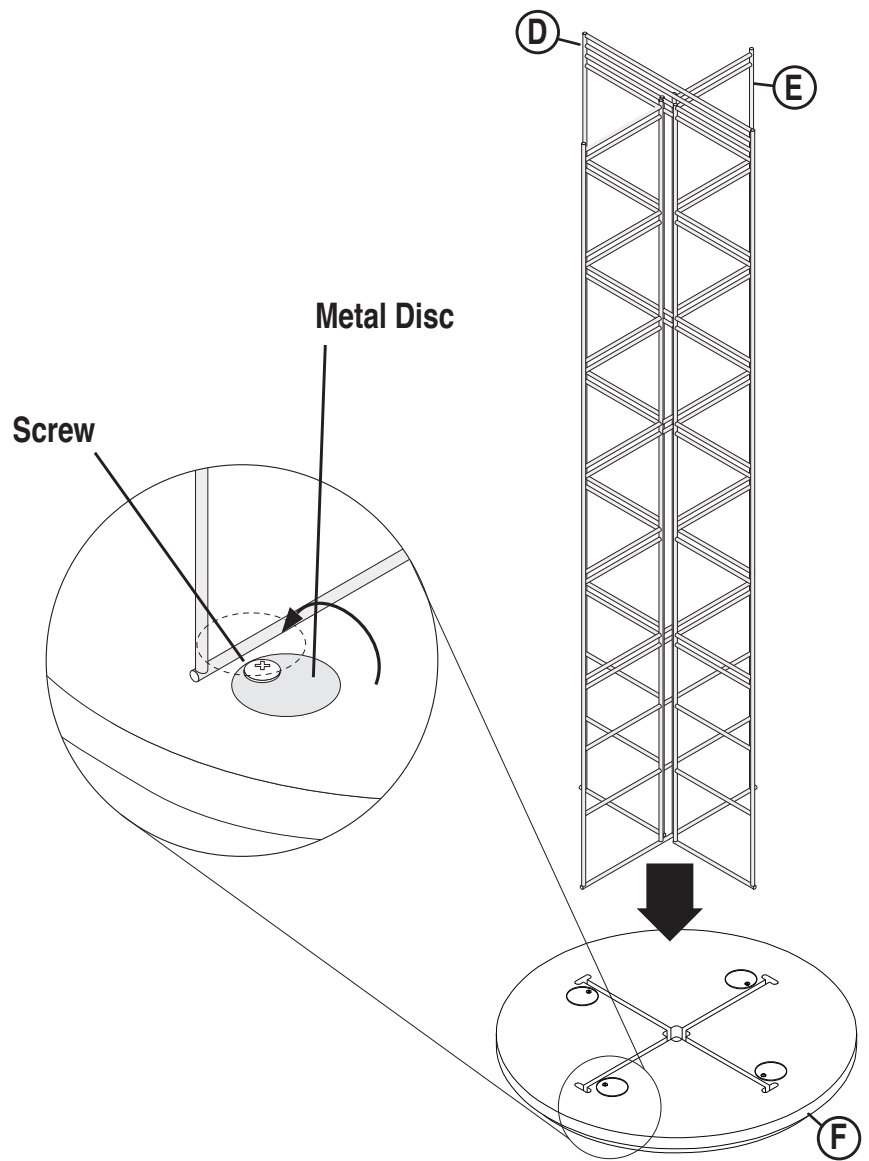


If you have any questions or need replacement parts, please call:

UPC Customer Service
1-800-859-7442


Design & Manufacture

ASSEMBLY

- 3** Attach (2) **Sign Holders (C)** to top 2 wires of **Wire Grid Top (D)**. Attach **Racks (G)** two at a time, back to back, to the Assembly using the **Ratchet Rivets (A)** (see detail at right).

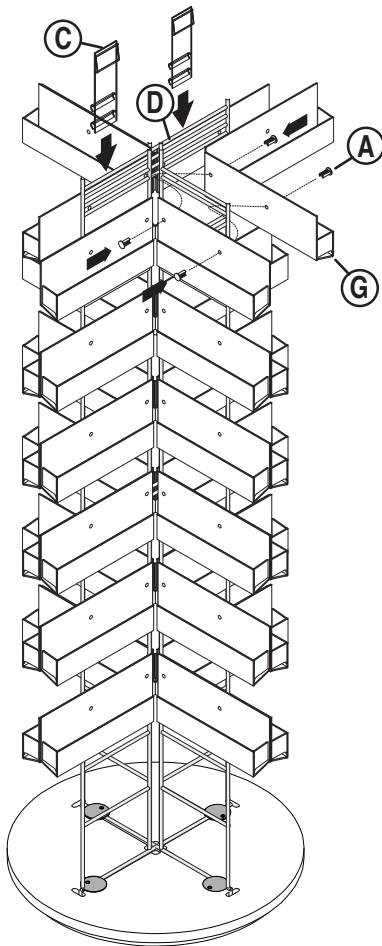


NOTE: Pinch the **Ratchet Rivets (A)** together until they are snug. Too much pressure while pinching together will cause the **Racks (G)** to crack.

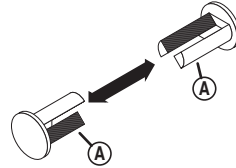

IMPORTANT!

Be sure the **Ratchet Rivets (A)** are trapped between Wire Pairs on **Wire Grid Assembly (D&E)**. Racks attached to the top of the **Wire Grid Top (D)** are attached through the second pair from top.

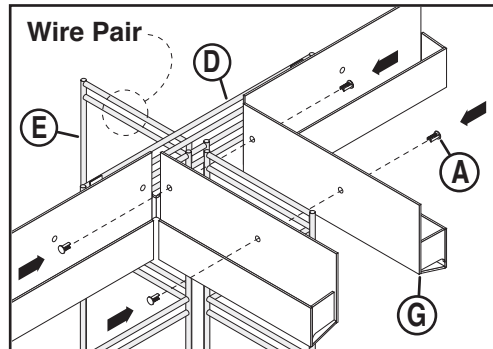

- 4** Attach **Card Clips (B)** to the front of each **Rack (G)**, two Clips per Rack.

