 



ASSEMBLY INSTRUCTIONS

Thank you for your purchase of one of many fine products designed & manufactured by UPC. We have made every effort to make your assembly easy, clear & hassle free. For more information or if you have any questions contact customer service at 1-800-859-7442.

PARTS BAG UPC #14862 UPC - 18 Pocket A2 Countertop Impulse

PART	Quantity	Reference
Push Pin	4	Α
Trusshead Screw	4	В
Header Clip	1	С




 


TOOLS REQUIRED: #2 Phillips Screwdriver

PARTS LIST

PART	Quantity	Reference
Spinner Plate	1	D
Tower Panel	2	E
Тор	1	F
Pocket	18	G

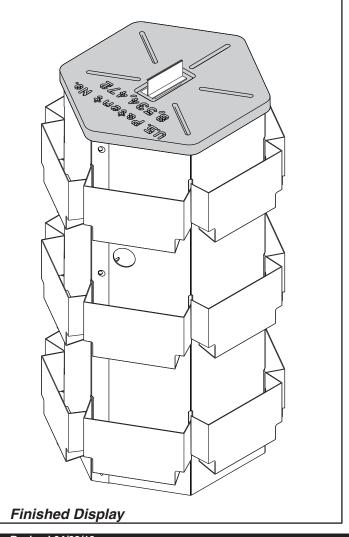

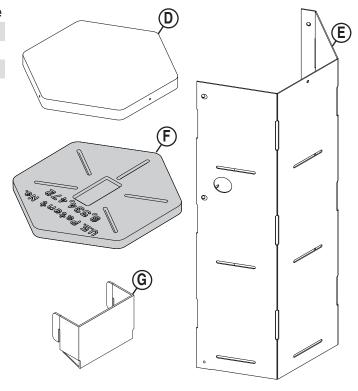


If you have any questions please call UPC Customer Service

1-800-859-7442

Design & Manufacture
upcdisplays.com

Revised 04/22/19


Page 1 of 4

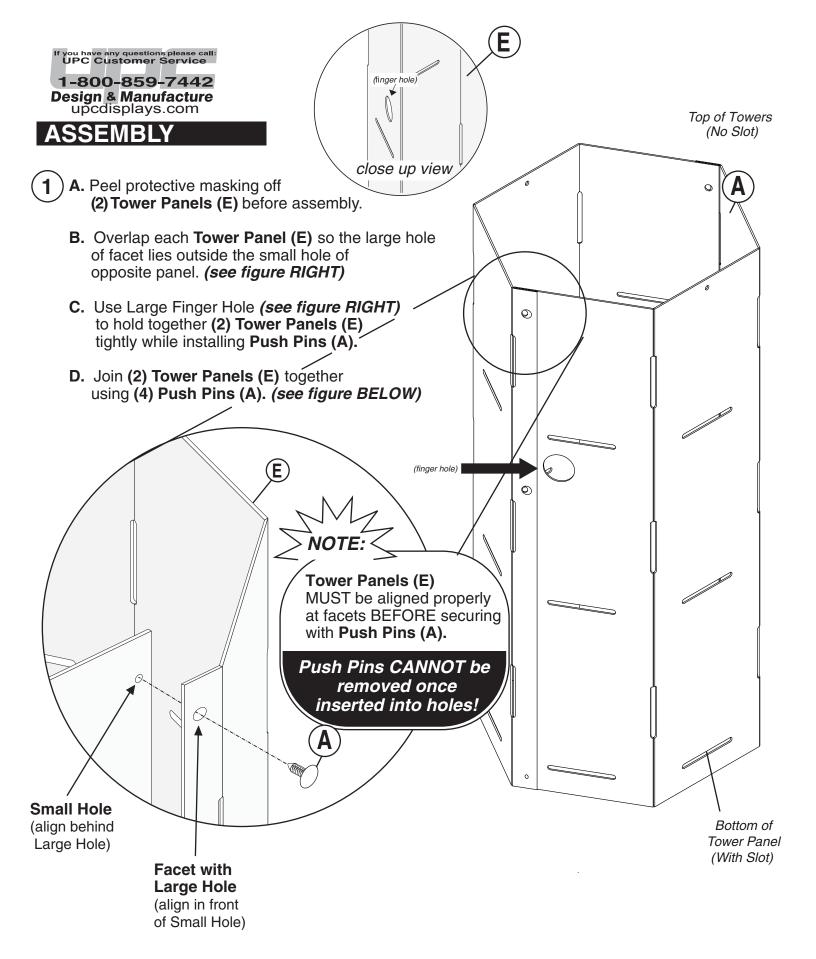


1-800-859-7442 Design & Manufacture upcdisplays.com


ASSEMBLY

Align corresponding holes and set the Tower Panel Assembly (E) onto the Spinner Plate (D).

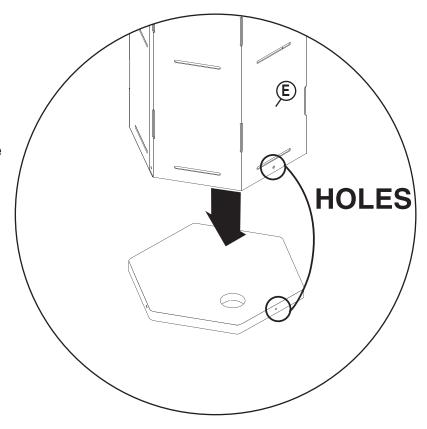

- Secure Tower Panel Assembly (E) to Spinner Plate (D) at middle holes of Tower Panel Assembly (E). Attach Tower Panel Assembly (E) to Spinner Plate (D) at edge with (2) Trusshead Screws (B) DO NOT tighten completely!
- Continue to secure Tower Panel
 Assembly (E) to Spinner Plate (D) at
 corner holes of Tower Panel Assembly (E).
 Attach with (2) Trusshead Screws (B) and
 tighten all (4) securely.

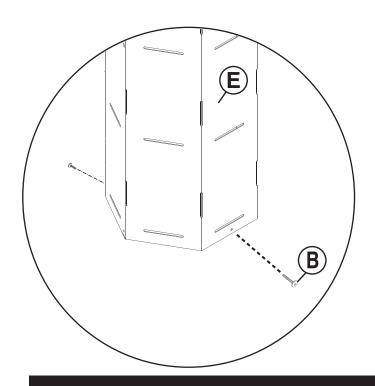

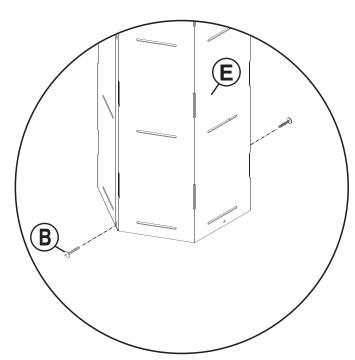



Peel protective layer from tape on **Header Clip (C)** and secure to the center of **Top (F)**. Lower **Top (F)** on to the top of **Tower Panel Assembly (E)**.

ASSEMBLY

