


PARTS BAG

UPC#5696B





56 Pocket Spinner

| PART | Quantity | Reference |
|--------------|--------------|-----------|
| Euro Screws | 8 | A |
| Push Pins | 60 (4 extra) | B |
| Card Clips | 28 | C |
| Header Clip | 1 | D |
| Allen Wrench | 1 | E |

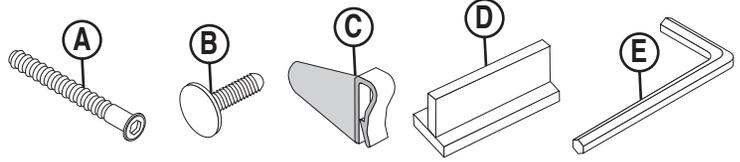

PARTS LIST

| PART | Quantity | Reference |
|--------------|----------|-----------|
| Corner Posts | 4 | F |
| Top Cap | 1 | G |
| Base | 1 | H |
| Pockets | 28 | I |

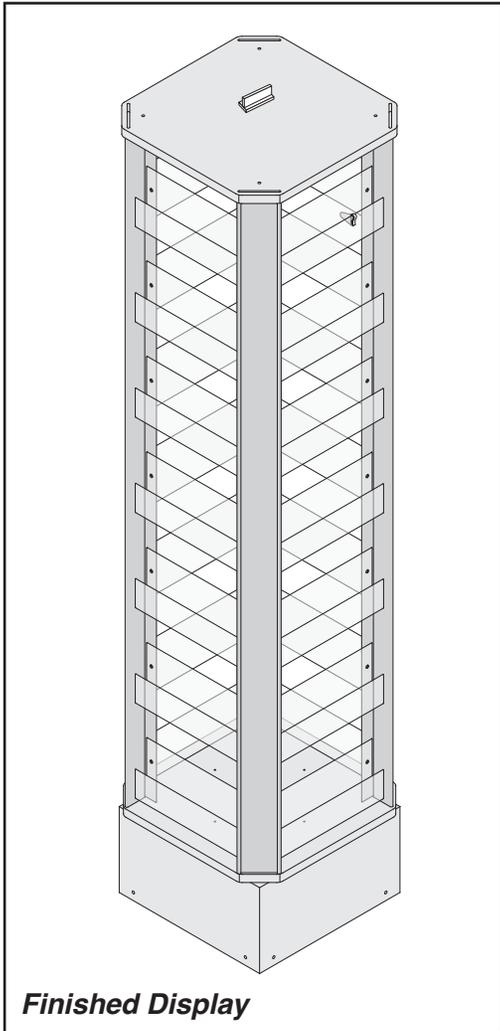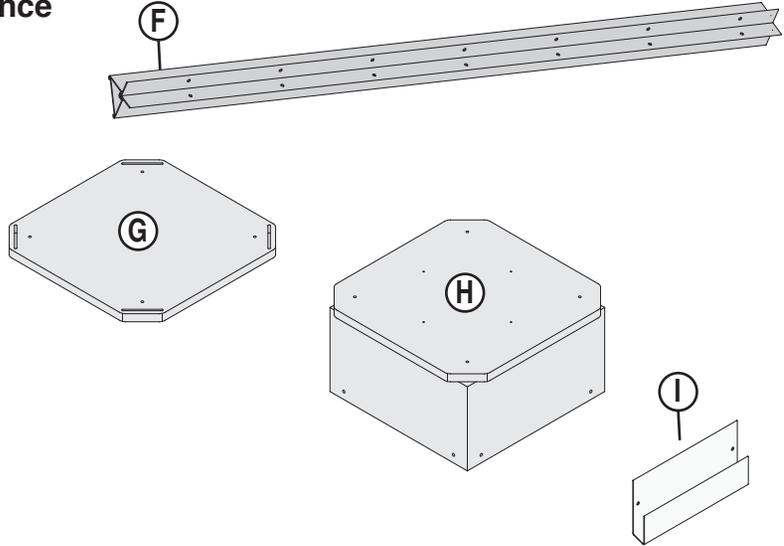

Finished Display

If you have any questions or need replacement parts, please call:

UPC Customer Service
1-800-859-7442


Design & Manufacture

ASSEMBLY

1

Identify Top and Bottom of
(4) Corner Posts (F).


NOTE: Holes are further from the top than the bottom.

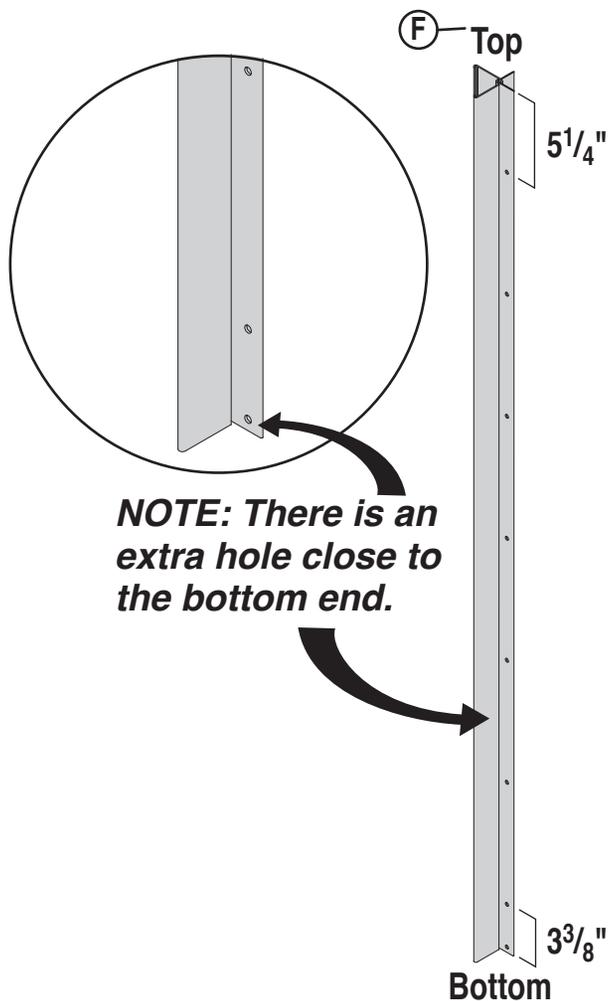


NOTE: There is an extra hole close to the bottom end.

2

Attach **(4) Corner Posts (F)** to the **Base (H)** using **(4) Euro Screws (A)**, as shown. Top must be up, bottom down.

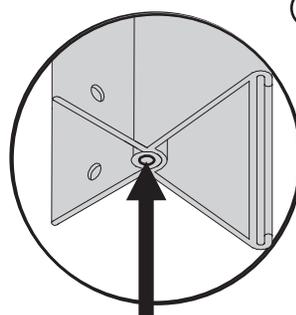

NOTE: Make sure to install Screw into round hole in Corner Posts.

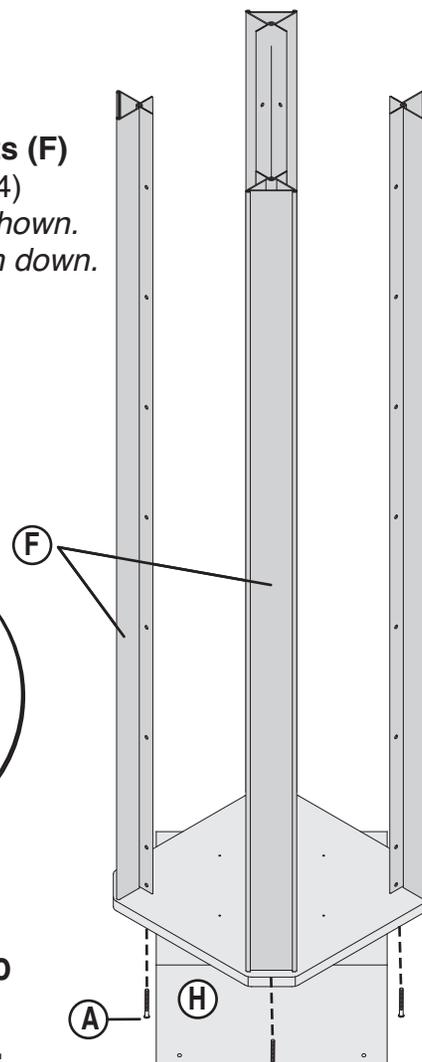

If you have any questions or need replacement parts, please call:
UPC Customer Service
1-800-859-7442


Design & Manufacture

ASSEMBLY

3

Push (2) **Push Pins (B)** into each **Pocket (I)** then attach to **Corner Posts (F)**.

Note: Be sure Push Pins are tight - the Racks provide the rigidity of the tower.

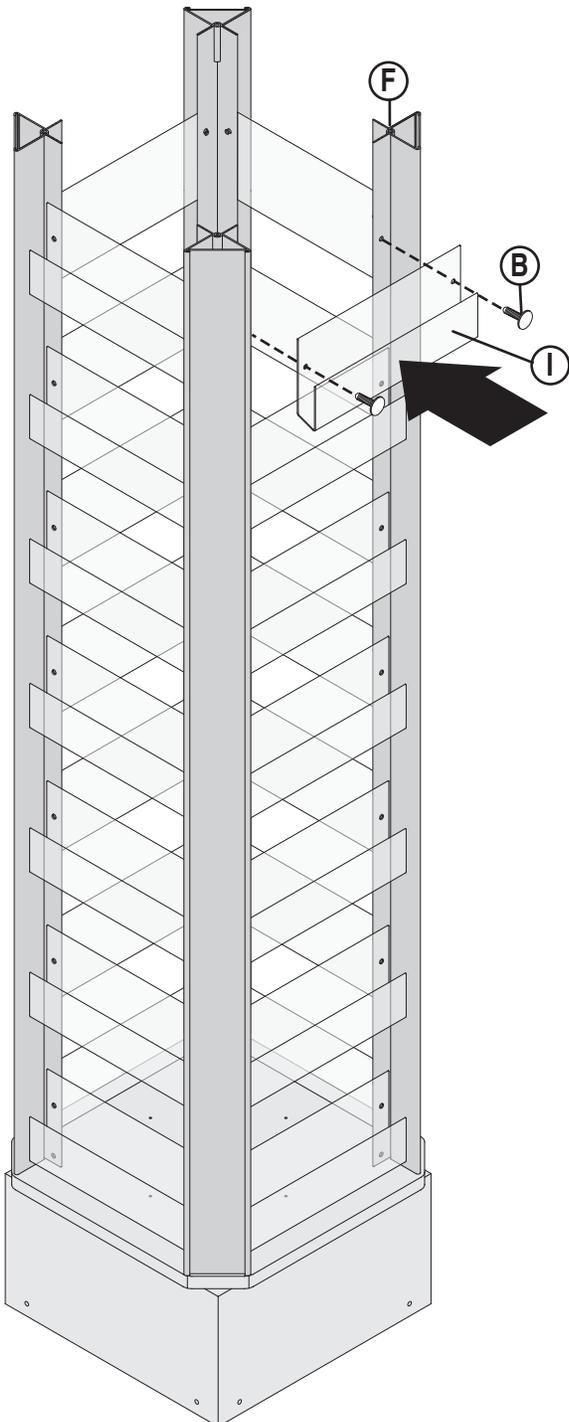

4

Attach **Top Cap (G)** onto **Corner Posts (F)** with (4) **Euro Screws (A)**. Insert **Card Clips (C)** where needed. Attach **Header Clip (D)** in center of **Top Cap (G)**.

