


PARTS BAG

UPC#5699B




84 Pocket Spinner

PART	Quantity	Reference
Euro Screws	8	A
Push Pins	60 (4 extra)	B
Card Clips	56	C
Header Clip	1	D
Allen Wrench	1	E

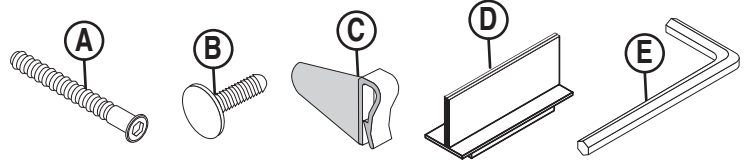


PARTS LIST

PART	Quantity	Reference
Corner Posts	4	F
Top Cap	1	G
Base	1	H
Pockets	28	I

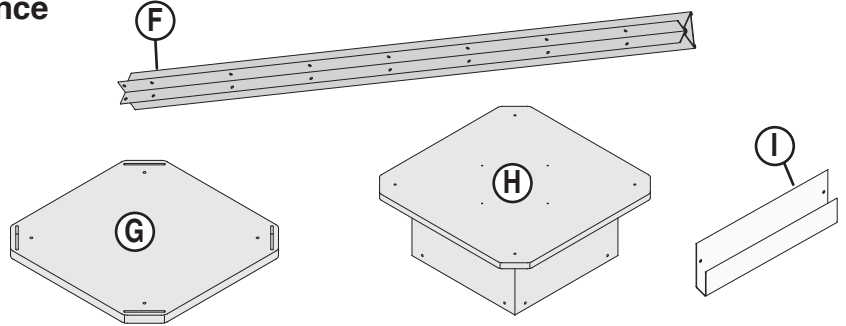


ASSEMBLY

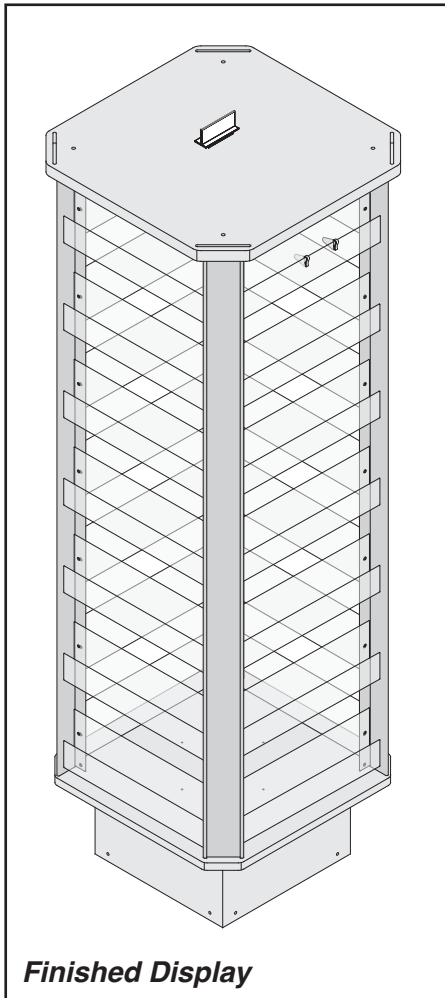


1

Identify Top and Bottom of (4) Corner Posts (F).
NOTE: Holes are further from the top than the bottom.

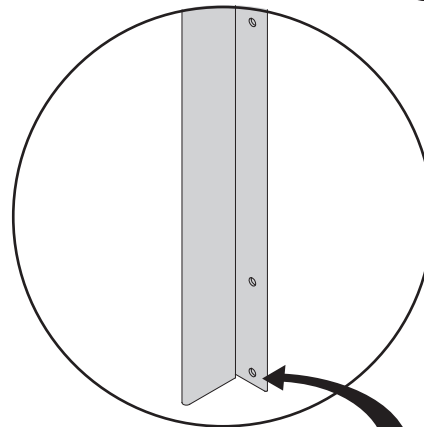

NOTE: There is an extra hole close to the bottom end.

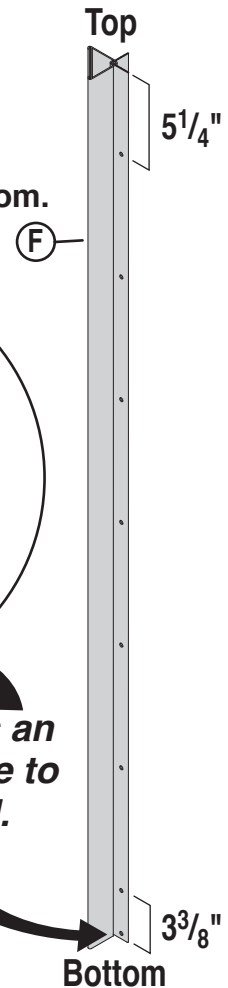


If you have any questions or need replacement parts, please call:

UPC Customer Service
1-800-859-7442


Design & Manufacture

ASSEMBLY

- 2 Attach (4) **Corner Posts (F)** to the **Base (H)** using (4) **Euro Screws (A)**, as shown. *Top must be up, bottom down.*

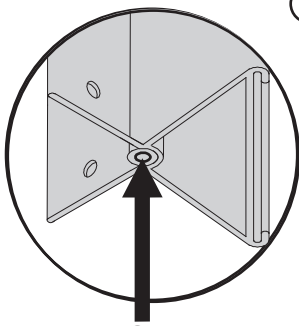


NOTE:
Make sure to install Screw into round hole in Corner Posts.

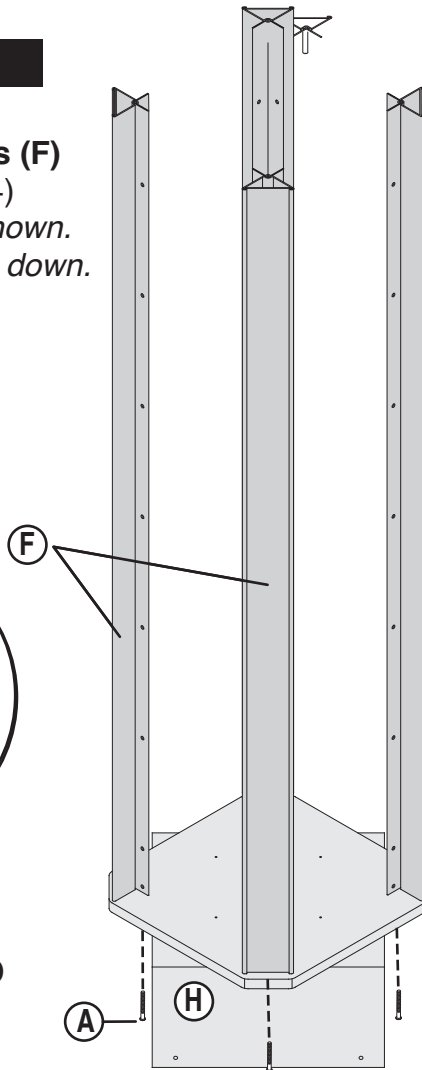

- 3 Push (2) **Push Pins (B)** into each **Pocket (I)** then attach to **Corner Posts (F)**.

Important Note:

Insert **Push Pins (B)** through holes in **Pockets (I)** **FIRST**
Then attach **Pocket Assembly** to **Tower**.
Be sure **Push Pins** are tight - the **Racks** provide the rigidity of the tower.

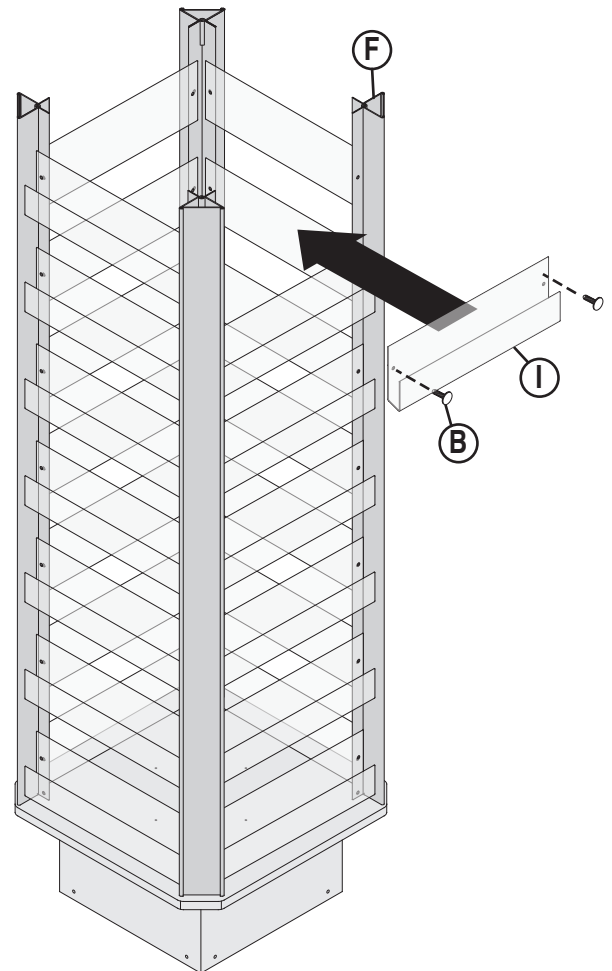

If you have any questions or need replacement parts, please call:

UPC Customer Service
1-800-859-7442

Design & Manufacture

ASSEMBLY

4

Attach **Header Clip (D)** in center of **Top Cap (G)**. Attach **Top Cap (G)** onto **Corner Posts (F)** with (4) **Euro Screws (A)**. Insert **Card Clips (C)** where needed.

