## Design & Manufacture ASSEMBLY INSTRUCTIONS

Thank you for your purchase of one of many fine products designed & manufactured by UPC. We have made every effort to make your assembly easy, clear & hassle free. For more information or if you have any questions contact customer service at 1-800-859-7442.

## **UPC 80401** PARTS BAG 72 Pocket 5"x7" Daisy Spinner Quantity PART Reference $\mathbf{C}$ $(\mathbf{A})$ $(\mathbf{B})$ D Connector Nut 4 Α 2 В Hex Wrench Ē 1 Cotterpin Έ D 2 Spinner Track Spinner Bearings 1 Ε Sign Clip 1 K) (H Ĵ 2 People Required for Assembly!!! Œ TOOLS REQUIRED: Flathead Screwdriver PARTS LIST PART Quantity Reference Pole 1 н Threaded Pole 2 L 1 Base J 7 Κ Spacer End Daisy Plate 2 L 6 **Daisy Plate** Μ Pocket 72 Ν M N` you have any questions please c UPC Customer Service


1-800-859-7442 Design & Manufacture upcdisplays.com


Revised 11/15/2018


**Finished Display** 




If **Daisy Caster Kit** was purchaced, install casters as shown below. Otherwise skip this step.

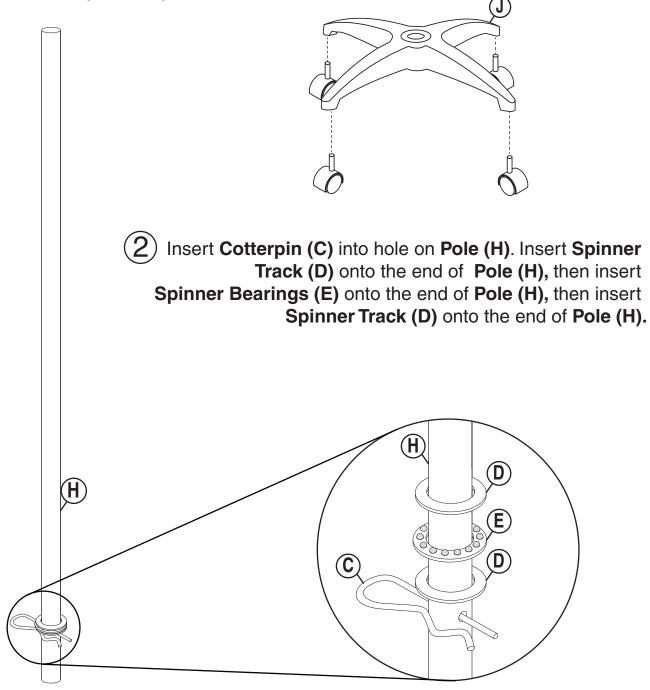

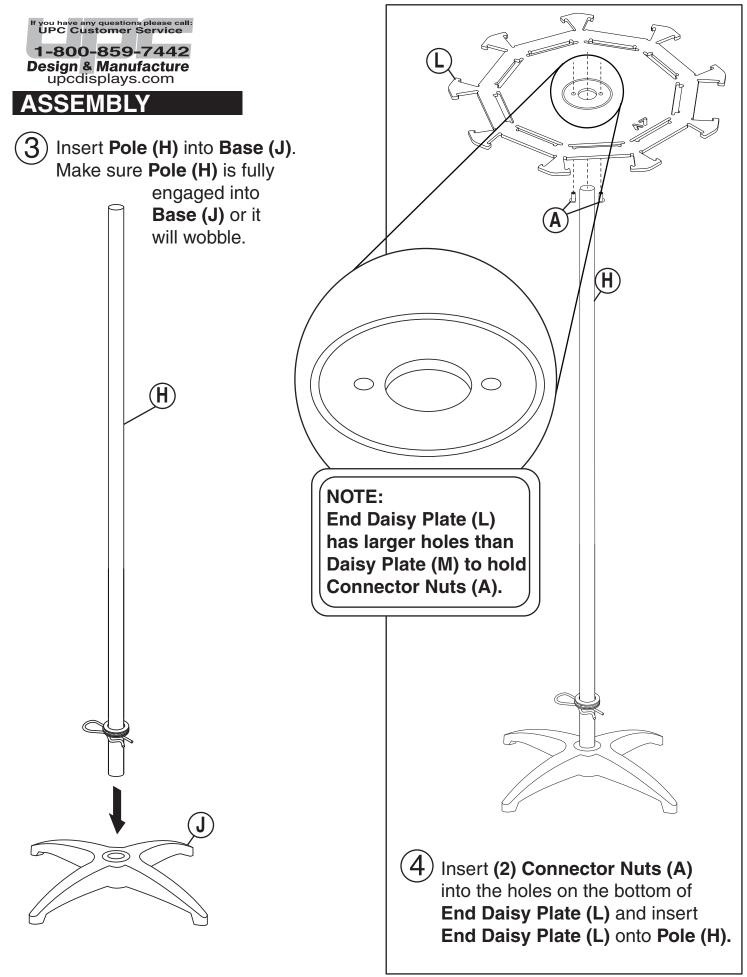

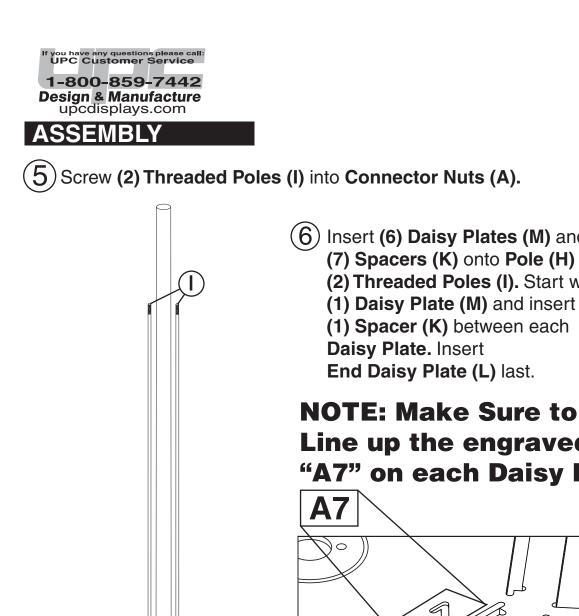

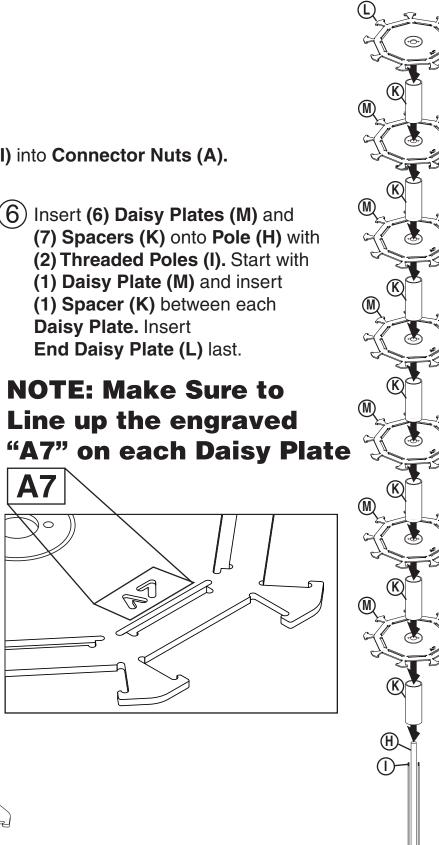


B

## ASSEMBLY



This step requires two people.

Screw (2) Connector Nuts (A) onto the end of each Threaded Pole (I) using Hex Wrench (B), one from each end. Then attach Sign Clip (F) onto Pole (H) as shown below.

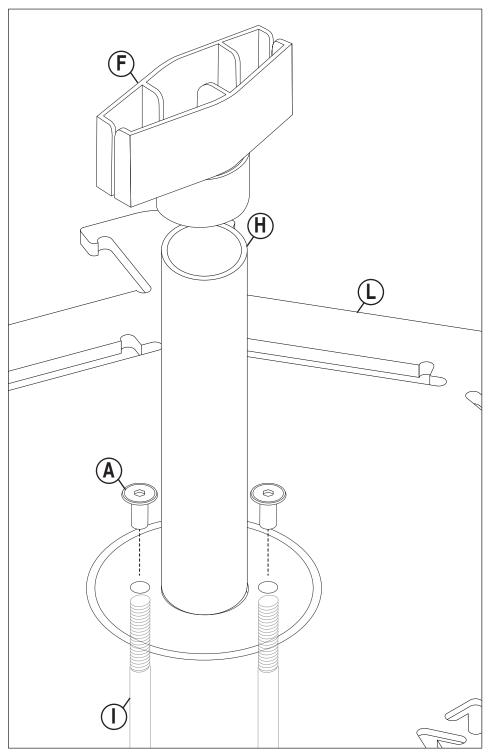

Page 5 of 6





## 8 Attach (72) Pockets (N) into Daisy

Plates (M/L) by inserting the Pocket (N) into the spaces on Daisy Plate (M/L). Then slide the bottom tab underneath Daisy Plate (M/L) and push back tab into the slots on Daisy Plate (M/L) and push down.

