

ASSEMBLY INSTRUCTIONS


PARTS LIST UPC 32786 Metal Frame Header for 13 Tier Colossal

PART Post Frame Quantity Reference
1 A
1 B

ASSEMBLY

1 - Screw Post (A) into Frame (B).

2 – Insert Assembly into hole on top of Colossal.

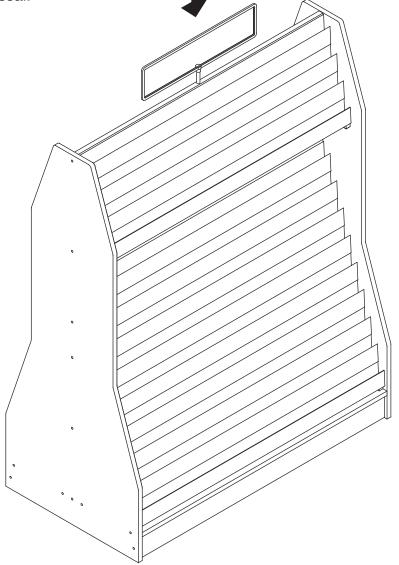

If you have any questions or need replacement parts, please call:

UPC Customer Service

1-800-859-7442

Design & Manufacture

Revised 10/8/09

Page 1 of