

ASSEMBLY INSTRUCTIONS

PARTS BAG UPC #0942 2-Tier 36" Break Resistant PETG Card Rack

PART Screw Post Slatwall Adapters #8 - 32 Hex Nuts Plastic Wall Toggler	Quantity 3 3 3 3	Reference A B C D
Plastic Wall Toggler Philips Head Screws	3 3	D F
1 milpo i loda colotto	•	_

TOOLS REQUIRED: Phillips & Flathead Screwdriver & Drill with 3/8" Drywall Bit






PART	Quantity
Rack	1 1
Divider	5






(A)

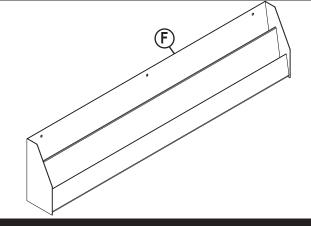

Slatwall Assembly

Align hole in **Slatwall Adapters (B)** with back side of hole in **Rack (F)**. Prongs extend back toward Slatwall and up. Attach using **Screw Post (A)** from front and **Nut (C)** on back.

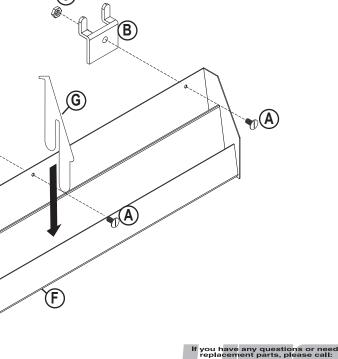

2 Insert Divider (G) into Rack (F).

NOTE: Assemble for EITHER Slatwall or Drywall, not both.

1-800-859-7442

Design & Manufacture

UPC Customer Service


Revised 06/06/14

Page 1 of 2

Drywall Assembly

Determine position on wall and drill 3/8" hole.
Squeeze **Wall Toggler (D)** flat and insert into hole.
Tap flange flush with wall.

Place Rack (F) against Toggler and insert Screw (E), tightening until secure.

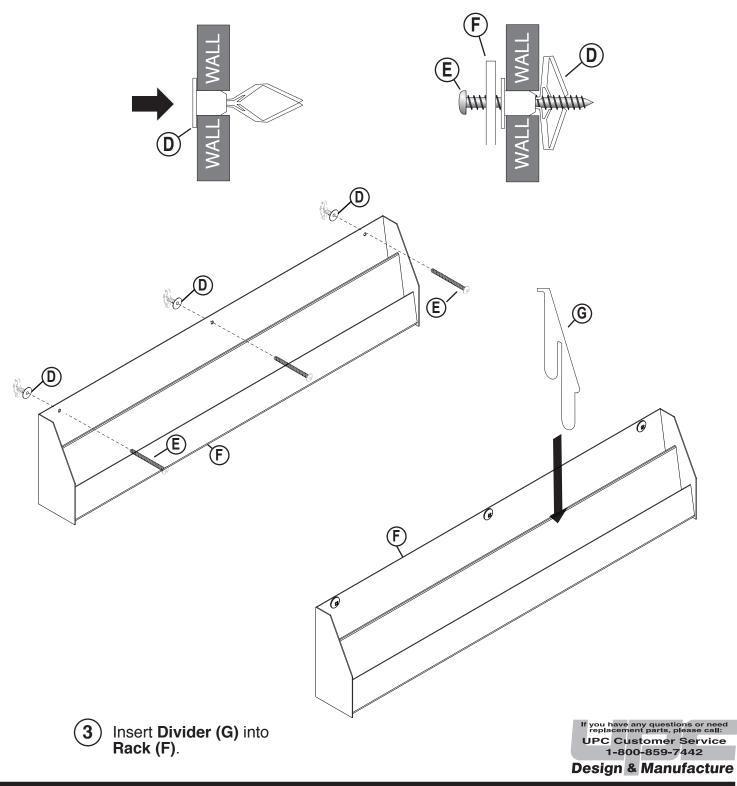

Revised 06/06/14 Page 2 of 2