


PARTS BAG UPC #0945 3-Tier 36" Break Resistant PETG Card Rack


PART	Quantity	Reference
Screw Post	3	A
Slatwall Adapters	3	B
#8 - 32 Hex Nuts	3	C
Plastic Wall Toggler	3	D
Phillips Head Screws	3	E

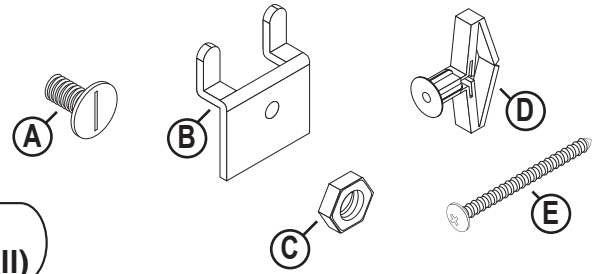

**TOOLS REQUIRED: Flathead Screwdriver (Slatwall)
Drill with 3/8" Drywall Bit & Phillips Screwdriver (Drywall)**


PARTS LIST

PART	Quantity	Reference
Rack	1	F
Divider	5	G

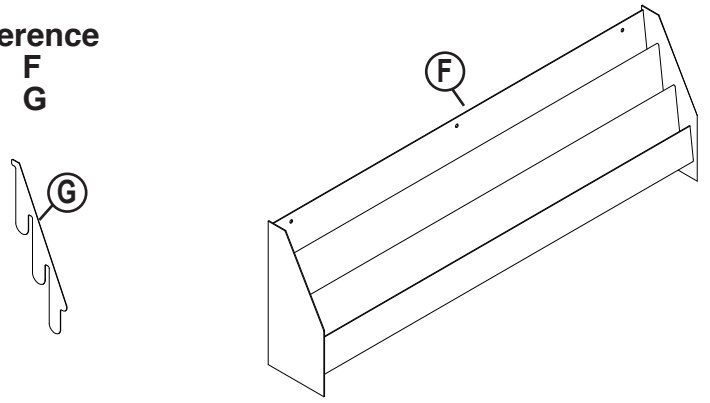

Slatwall Assembly NOTE: Assemble for EITHER Slatwall or Drywall, not both.

1 Align hole in **Slatwall Adapters (B)** with back side of hole in **Rack (F)**. Prongs extend back toward Slatwall and up. Attach using **Screw Post (A)** from front and **Nut (C)** on back.

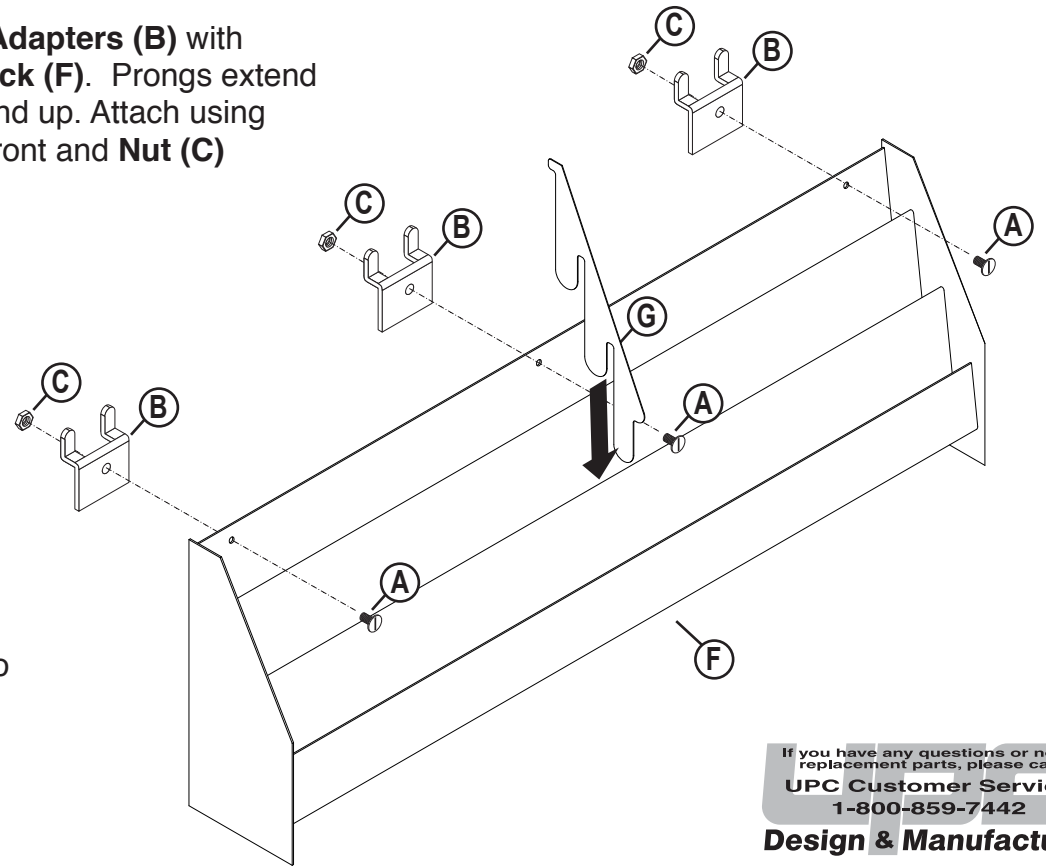

2 Insert **Divider (G)** into **Rack (F)**.


If you have any questions or need replacement parts, please call:
UPC Customer Service
1-800-859-7442
Design & Manufacture

Drywall Assembly

NOTE: Assemble for EITHER Slatwall or Drywall, not both.

- 1 Determine position on wall and drill 3/8" holes using drill and 3/8" drywall bit. Squeeze **Wall Toggler (D)** flat and insert into hole. Tap flange flush with wall.

- 2 Place **Rack (F)** against **Wall Toggler (D)** and insert **Screw (E)**, tightening until secure.

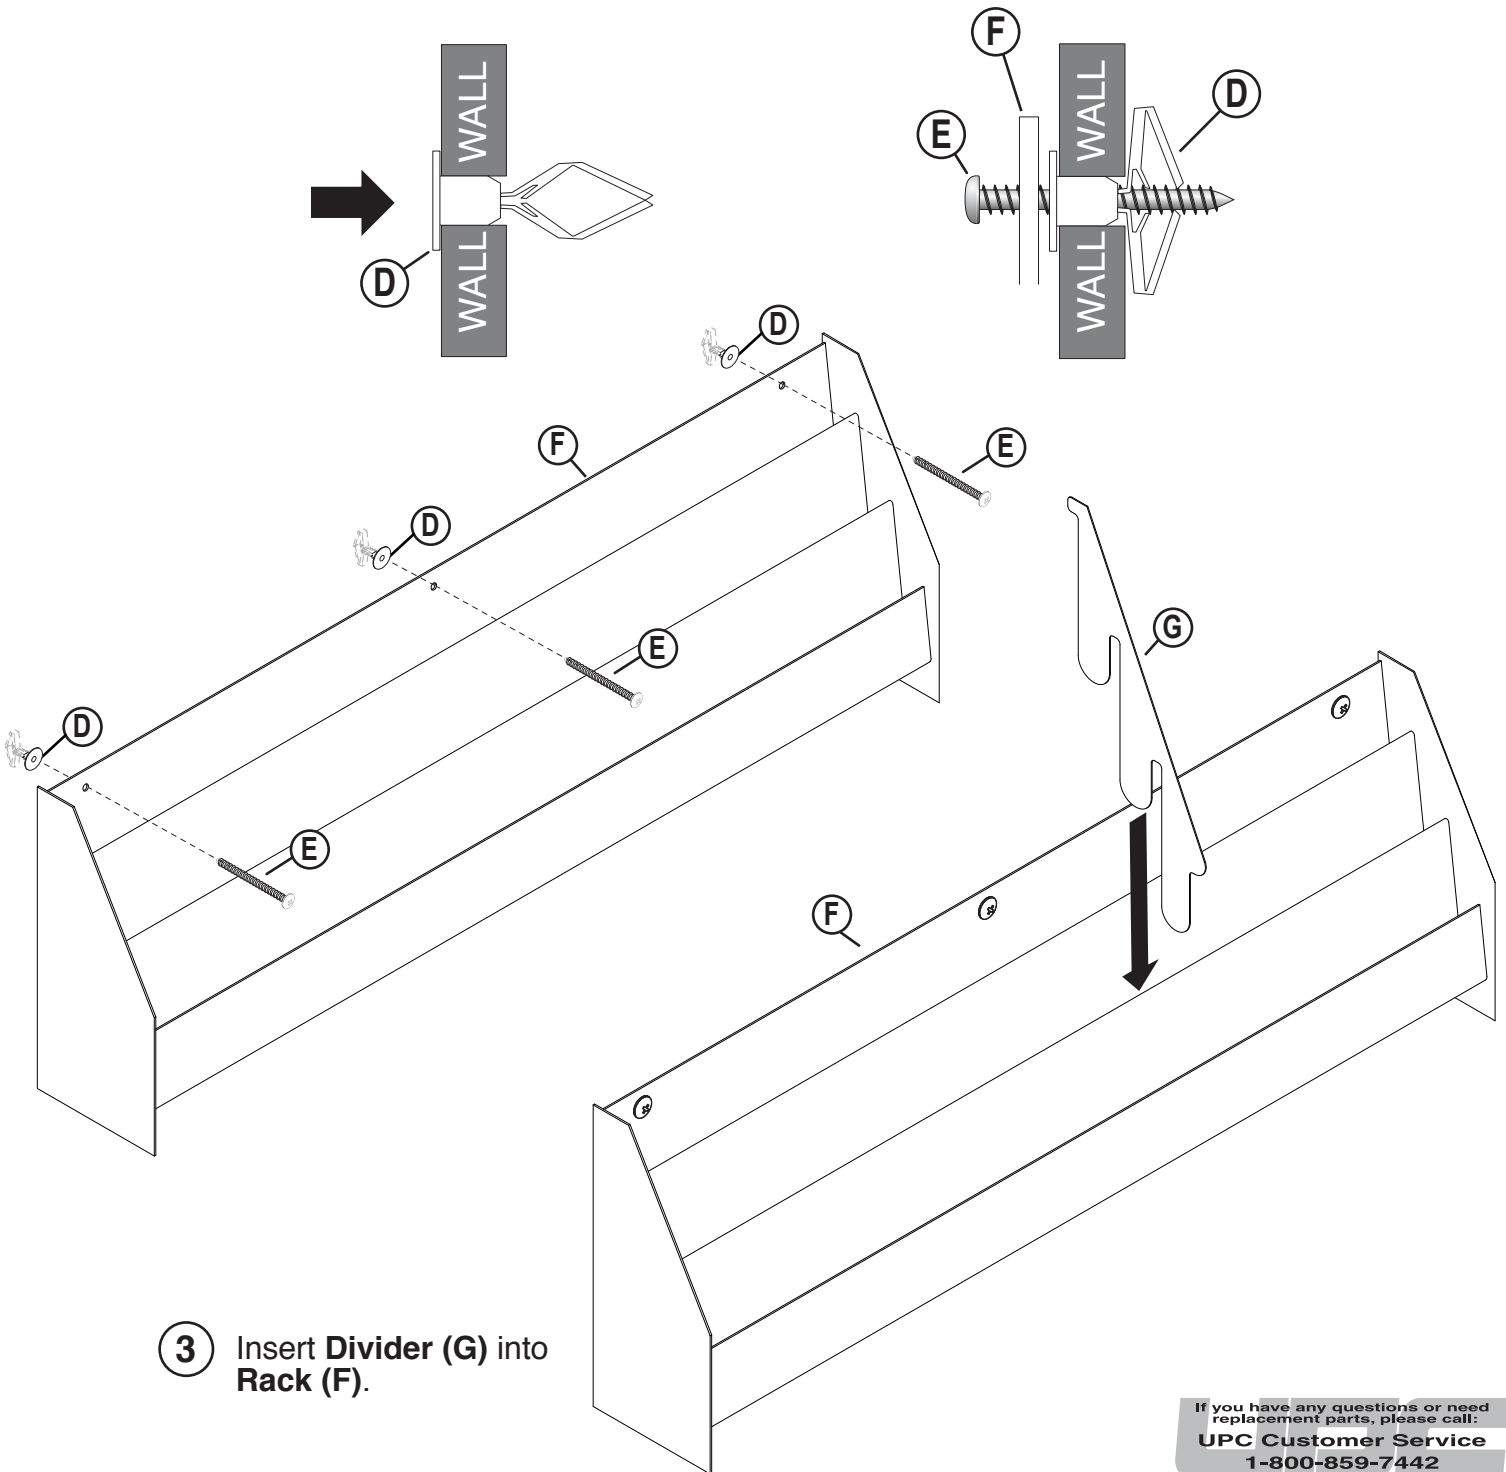

- 3 Insert **Divider (G)** into **Rack (F)**.

If you have any questions or need replacement parts, please call:
UPC Customer Service
1-800-859-7442

Design & Manufacture