

## **ASSEMBLY INSTRUCTIONS** Design & Manufacture

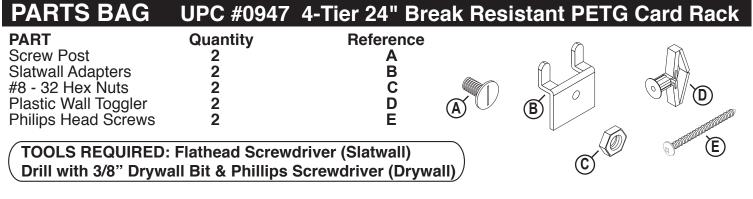


## **PARTS LIST**

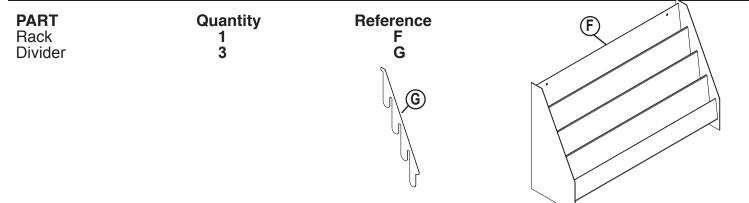

## **Slatwall Assembly**


**NOTE:** Assemble for EITHER Slatwall or Drywall, not both.

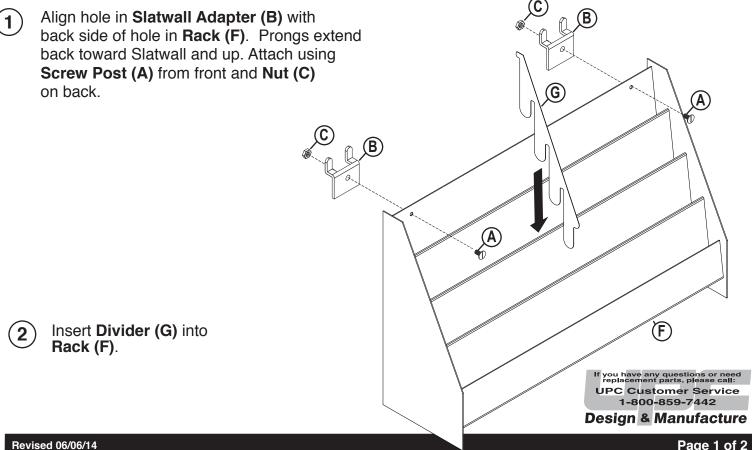

## **Drywall Assembly**

**NOTE:** Assemble for EITHER Slatwall or Drywall, not both.

 Determine position on wall and drill 3/8" holes using drill and 3/8" drywall bit. Squeeze
Wall Toggler (D) flat and insert into hole. Tap flange flush with wall. (2) Place Rack (F) against Wall Toggler (D) and insert Screw (E), tightening until secure.

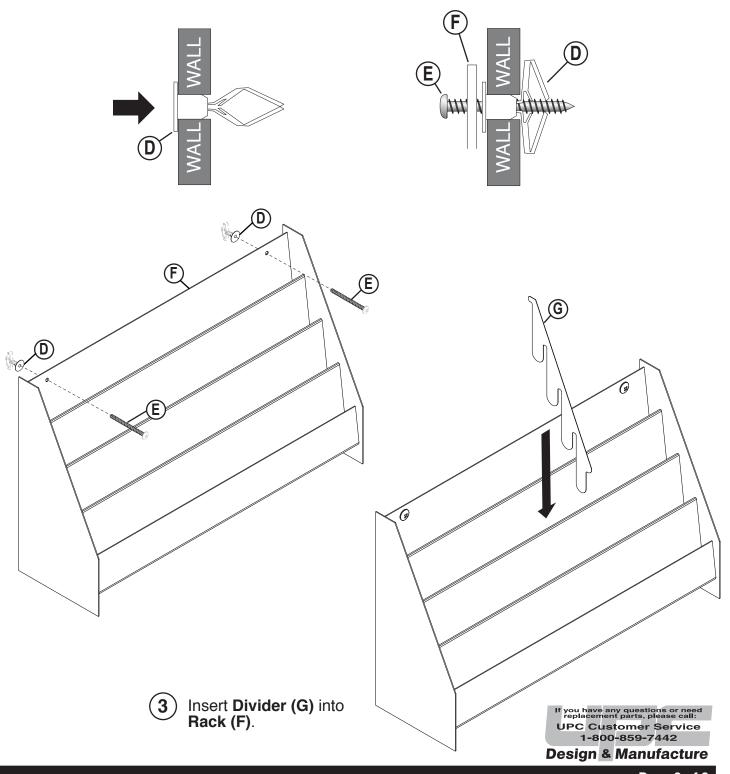

Page 2 of 2