


ASSEMBLY INSTRUCTIONS

PARTS BAG UPC 2011 5.5" up to 48" Wide 3-Tier PETG Card Rack


PART	Quantity	Reference	NOTE: Quantities of parts vary with width of Rack chosen.
Screw Posts	2-3	A	
Slatwall Adapters	2-3	B	
Nuts	2-3	C	
Plastic Wall Toggles	2-3	D	
Phillips Head Screws	2-3	E	

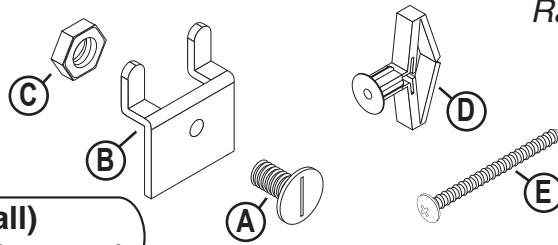

TOOLS REQUIRED: Flathead Screwdriver (Slatwall)
Drill with 3/8" Drywall Bit & Phillips Screwdriver (Drywall)


PARTS LIST

PART	Quantity	Reference
Divider	1-8	F
Rack	1	G

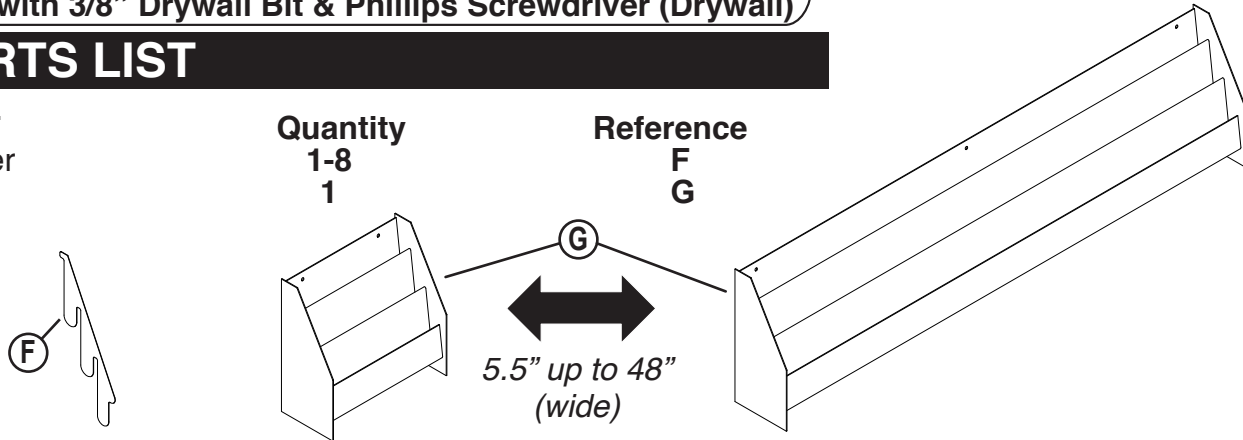

Slatwall Assembly NOTE: Assemble for EITHER Slatwall or Drywall, not both.

1 Align hole in **Slatwall Adapter (B)** with back side of hole in **Rack (G)**. Prongs extend back toward Slatwall and up. Attach using **Screw Post (A)** from front and **Nut (C)** on back.

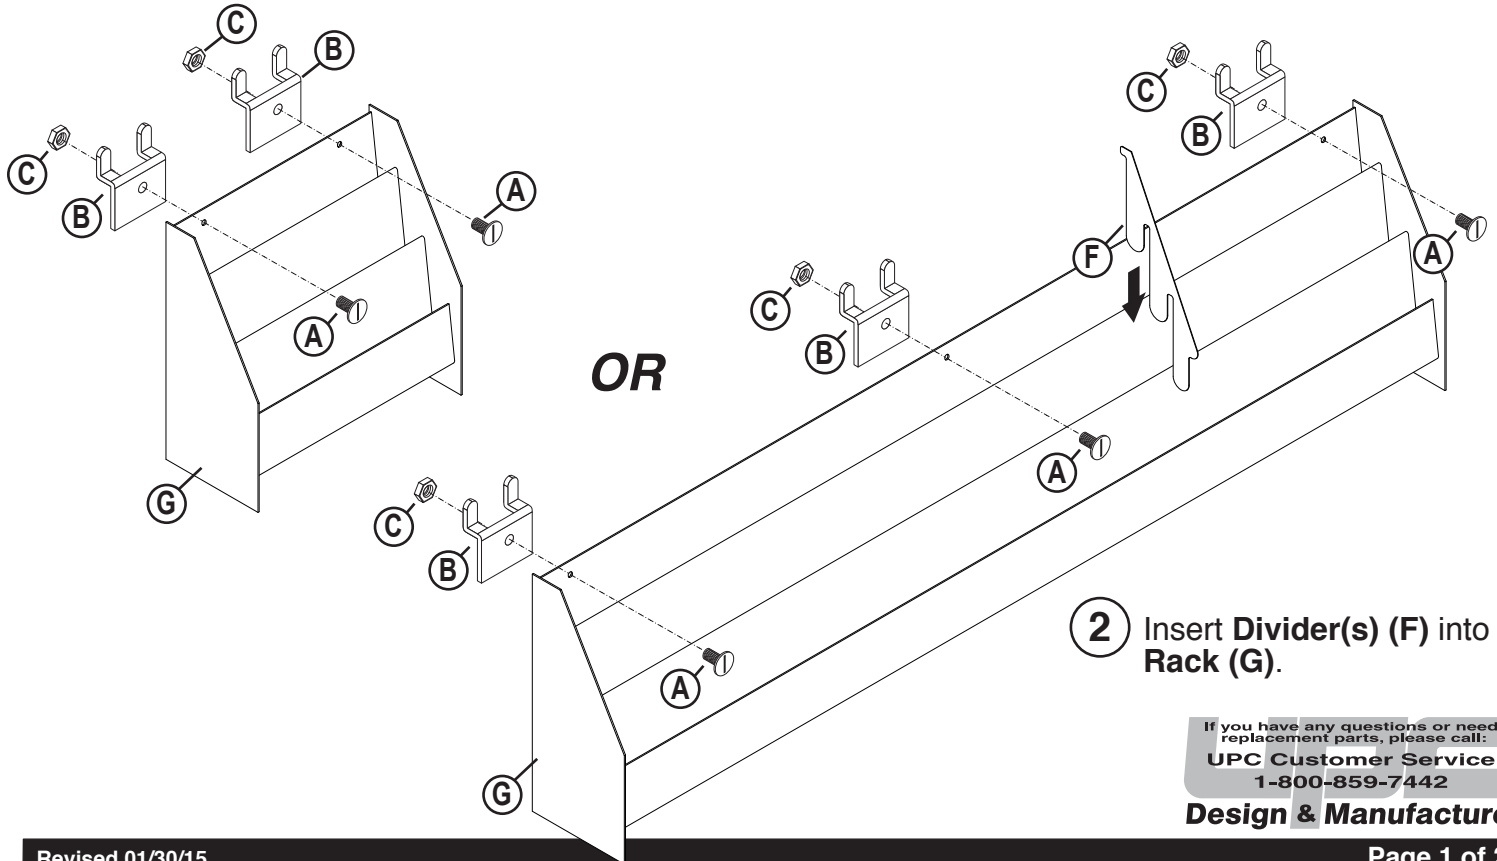

2 Insert **Divider(s) (F)** into **Rack (G)**.

If you have any questions or need replacement parts, please call:
UPC Customer Service
1-800-859-7442




Design & Manufacture

Drywall Assembly

NOTE: Assemble for EITHER Slatwall or Drywall, not both.


- 1 Determine position on wall and drill hole with 3/8" drywall bit.
Squeeze Wall Toggler (D) flat and insert into hole.
Tap flange flush with wall.

- 2 Place **Rack (G)** against **Wall Toggler (D)** and insert **Phillips Head Screw (E)**, tightening until secure.

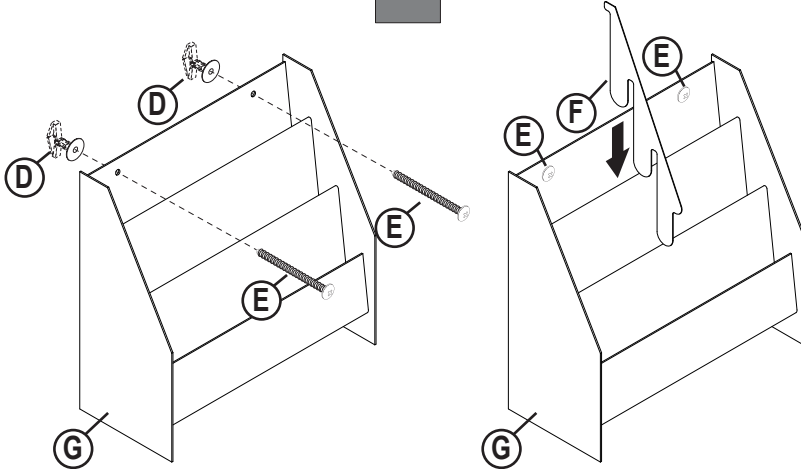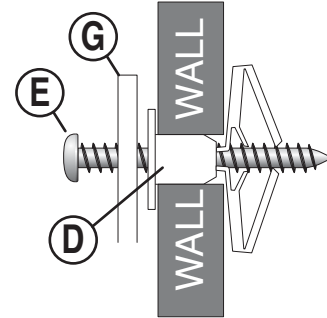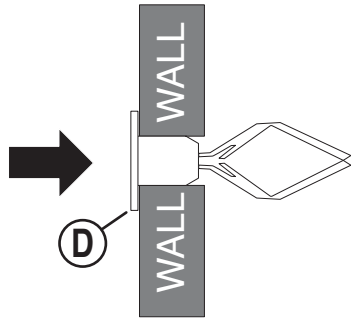

- 3 Insert **Divider(s) (F)** into **Rack (G)**.

OR

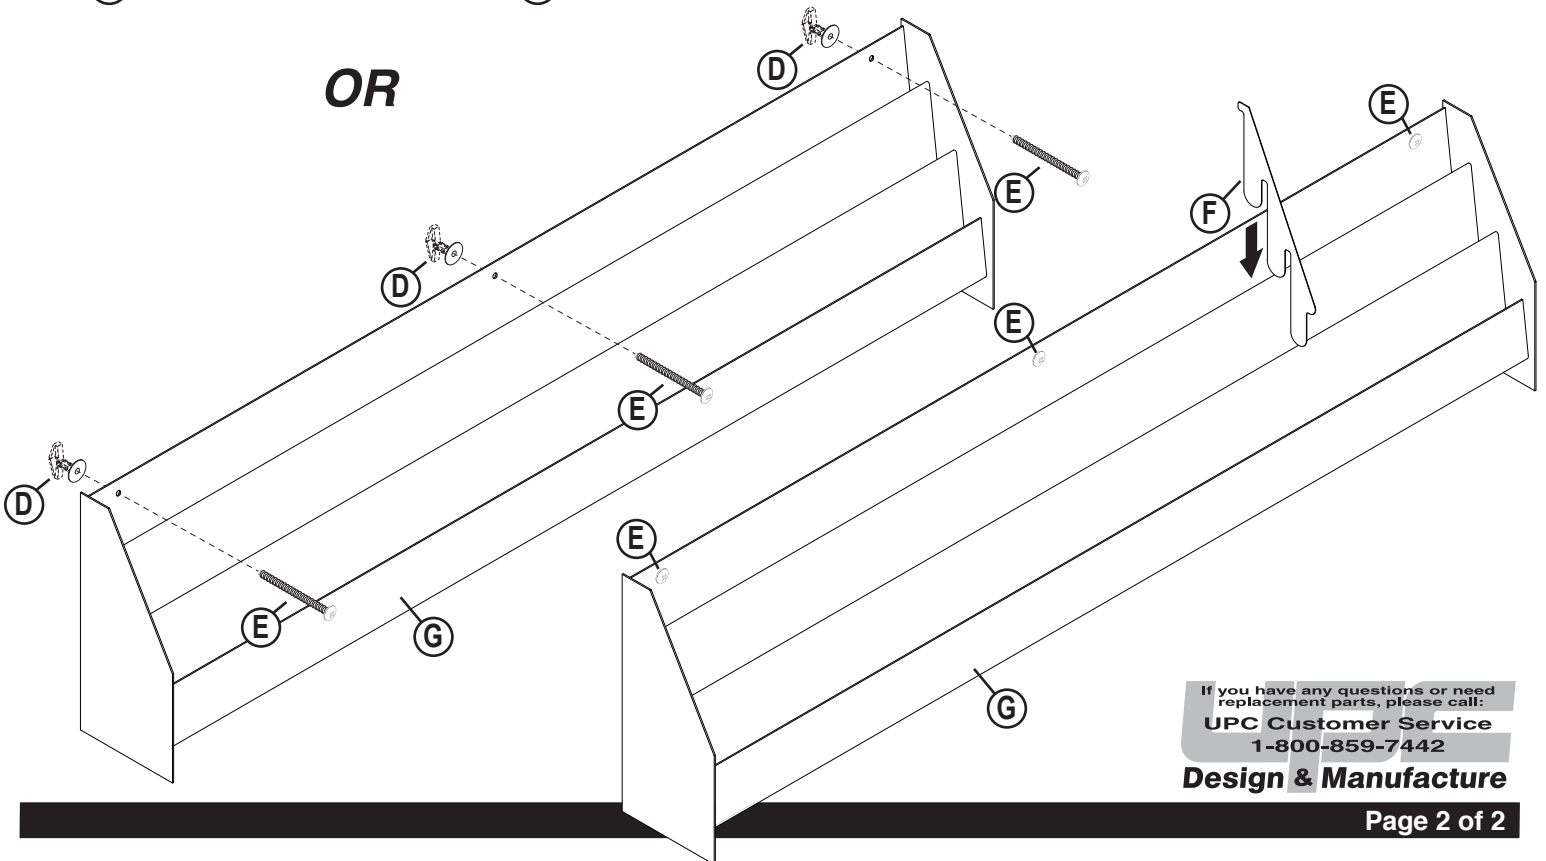

If you have any questions or need replacement parts, please call:
UPC Customer Service
1-800-859-7442

Design & Manufacture