

## Design & Manufacture ASSEMBLY INSTRUCTIONS

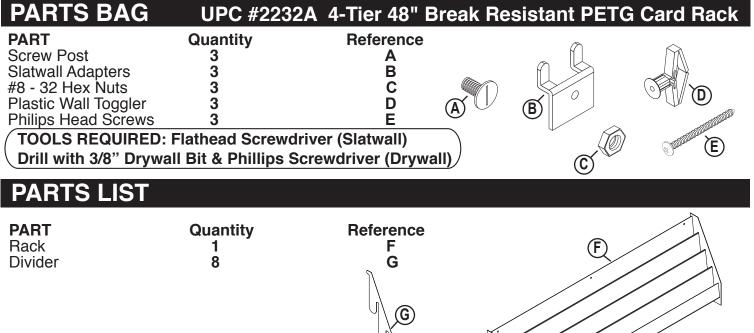

## **Slatwall Assembly**

NOTE: Assemble for EITHER Slatwall or Drywall, not both.

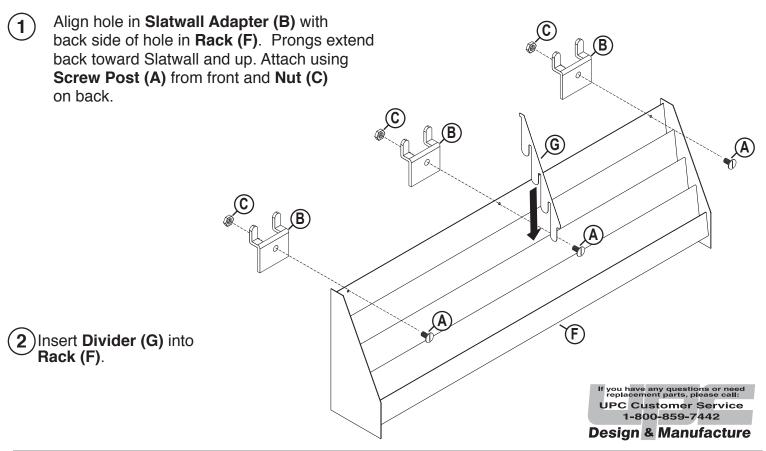

## **Drywall Assembly**

1 Determine position on wall and drill 3/8" holes using drill and 3/8" drywall bit. Squeeze **Wall Toggler (D)** flat and insert into hole. Tap flange flush with wall.

2 Place Rack (F) against Toggler and insert Screw (E), tightening until secure.

