


ASSEMBLY INSTRUCTIONS

PARIS BAG		UPC #3637A		36" 2-Tier	PETO	a Rack	with 2/3 Exposure	
PART Screw Posts Slatwall Adapters Hex Nuts Wall Togglers Phillips Head Screws Card Clips	Quantity 3 3 3 3 5 3 12	Reference A B C D E F	A U	B			E manual F)


TOOLS REQUIRED: Flathead Screwdriver (Slatwall) Drill with 3/8" Drywall Bit & Phillips Screwdriver (Drywall)

PARTS LIST

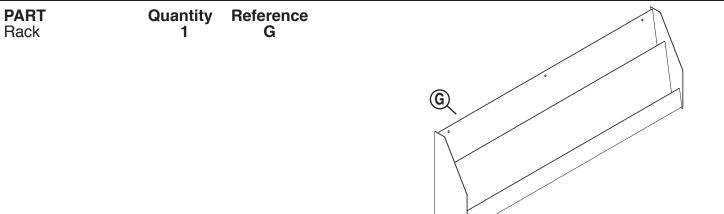

Slatwall Assembly

NOTE: Assemble for EITHER Slatwall or Drywall, not both.

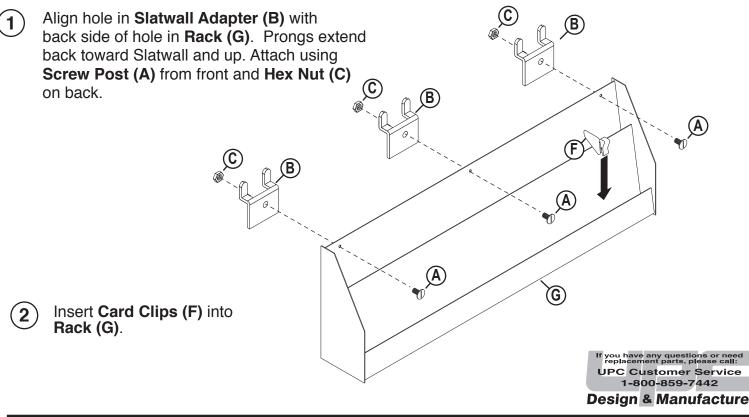

Drywall Assembly

NOTE: Assemble for EITHER Slatwall or Drywall, not both.

1 Determine position on wall and drill 3/8" hole. Squeeze **Wall Toggler (D)** flat and insert into hole. Tap flange flush with wall. 2 Place **Rack (G)** against Toggler and insert **Phillips Head Screw (E)**, tightening until secure.

