


# **ASSEMBLY INSTRUCTIONS**

## **PARTS BAG**

#### **UPC #4559**


### 24 Pocket Spinner

PART #8-32 x 3/8" Screws Screw Posts Ratchet Rivets	Quantity 4 4 2	Reference A B C
Header Clip	2	D



#### PARTS LIST

PART	Quantity	Reference
Pockets	24	E
Side Panels	2	F
Spinner	1	G
Base	1	Н

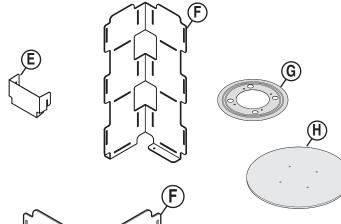



#### **ASSEMBLY**

Attach (2) Side Panels (F) to Base (H) and to Spinner (G) with
(4) #8-32 x 3/8" Screws (A) and
(4) Screw Posts (B).

Connect both **Side Panels (F)** with (2) **Ratchet Rivets (C)**, though holes at top of Side Panels (F).

Note: Side Panels (F) should form the shape of an "X".

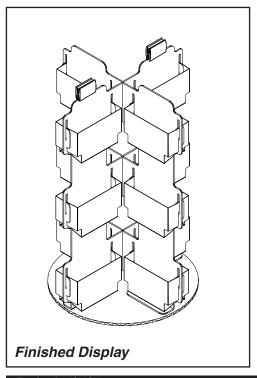

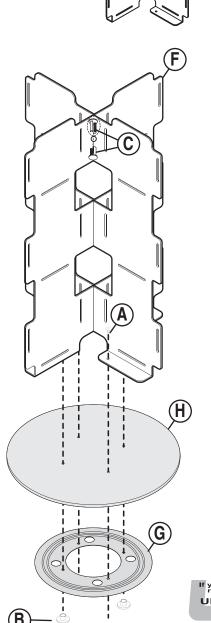

If you have any questions or need replacement parts, please call: UPC Customer Service 1-800-859-7442

Design & Manufacture

#### Design & Manufacture

#### **ASSEMBLY**

Attach Pockets (E) by hooking the tabs into the vertical slots in the Side Panels (F).

Lock bottom tongue of **Pockets (E)** into the horizontal slots on the **Side Panels (F)**.

Each slot holds (2) **Pockets (E)**, one on each side of the **Side Panel (F)**.

Attach (2) Header Clips (D) where needed.

