


Thank you for your purchase of one of many fine products designed & manufactured by UPC. We have made every effort to make your assembly easy, clear & hassle free. For more information or if you have any questions contact customer service at 1-800-859-7442.

# PARTS BAG UPC 8088 11 Tier 4' Storage Base

PART	Quantity	Reference
Connector Bolt	6	Α
Screw	4	В
Hinge	2	С
Cap	4	D
Allen Wrench	1	E


**TOOLS REQUIRED: #2 Phillips Screwdriver** 

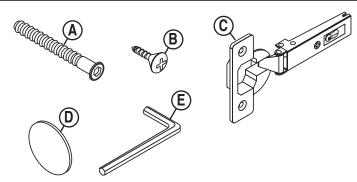

This part used with UPC 8089


## **PARTS LIST**

PART Quantity Reference
Base 1 F

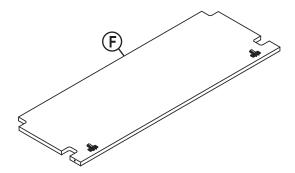

### **ASSEMBLY**

Attach Base (F) to assembly using (6) Connector Bolts (A).

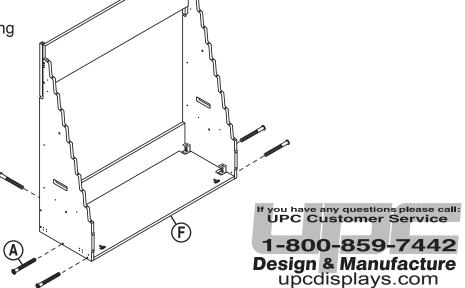

Revised 08/24/2018 Page 1 of 2




#### **ASSEMBLY**


Attach (2) Hinges (C) to Front Panel (P) from 8089 using (4) Screws (B).

Attach **Front Panel (P)** from 8089 to assembly by snapping hinges into hinge plates attached to **Base (F)**. See DETAIL bottom right.


Peel masking paper and attach (4) Caps (D) to cover screw holes in front side of Front Panel (P) from 8089.

Continue assembling full fixture according to directions included with 8089.

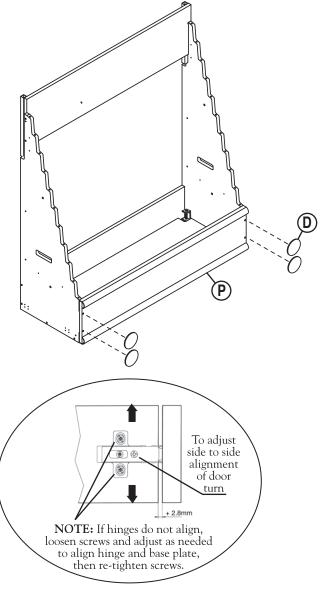

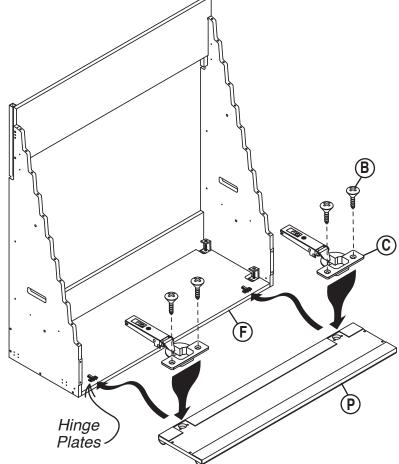

#### HINGE ATTACHMENT DETAIL

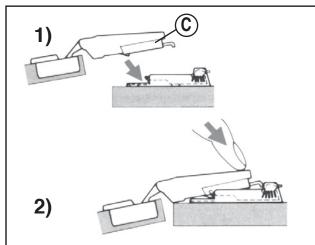

- 1) Place hinge in slightly inclined position and slide front hook under baseplate hook.
- 2) Push hinge end with finger and snap hinge into mounting plate.