!!! IMPORTANT !!!

IF YOU HAVE RECEIVED A

99 POCKET WEDGE ADD-ON UNIT #8204

WITH THIS FIXTURE

DO NOT USE THIS INSTRUCTION SHEET.

YOU MUST USE THE INSTRUCTION
SHEET INCLUDED WITH THE ADD-ON
UNIT TO CORRECTLY ASSEMBLE AND
PROPERLY CONNECT THE TWO UNITS



ASSEMBLY INSTRUCTIONS

PARTS BAG

UPC#8203


99 Pkt. Wedge Starter

PARTPush Pins

Quantity Reference 27 A



			<u>f</u>	
PART Left Side Right Side Front Clear Bottom Rack Header Back Brace Racks 2-Tier Divider Strips 5-Tier Divider Strips	Quantity	Reference B C E F G H I J K	B .	

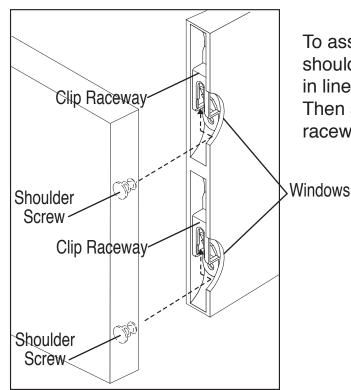


Connector Example

To assemble parts to side panels, slide the shoulder screws thru "Window" until they are in line with clip raceway.

Then slide shoulder screws down into clip raceway until connector "clicks" locked.

MOD-EEZ FASTENER DISENGAGEMENT

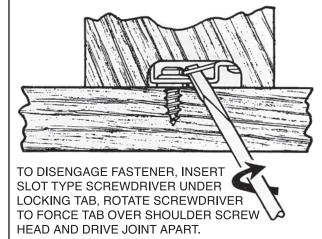

Revised 12/24/14 Page 2 of 5

Design & Manufacture

ASSEMBLY

Attach both Front (E) and Back Brace (H) to Left Side (B), as shown, then attach Right Side (C) to Front (E) and Back Brace (H).


NOTE: Remember to face the "Windows" toward the back.

Important Note:


When assembling this fixture be sure all "windows" face the back, **EXCEPT THE HEADER (G)** so that they are not visible when display is finished.

Attach Header (G) to Left & Right Sides (B & C).

NOTE: THE METAL BRACKETS FACE THE REAR.

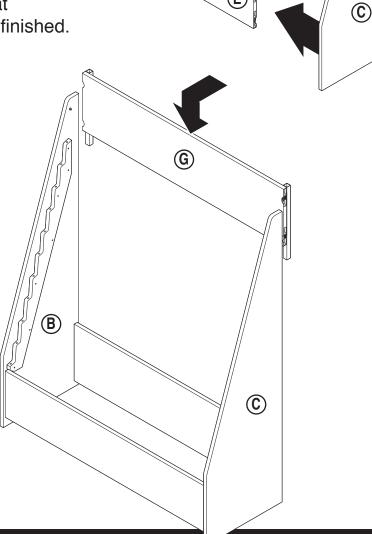

Design & Manufacture

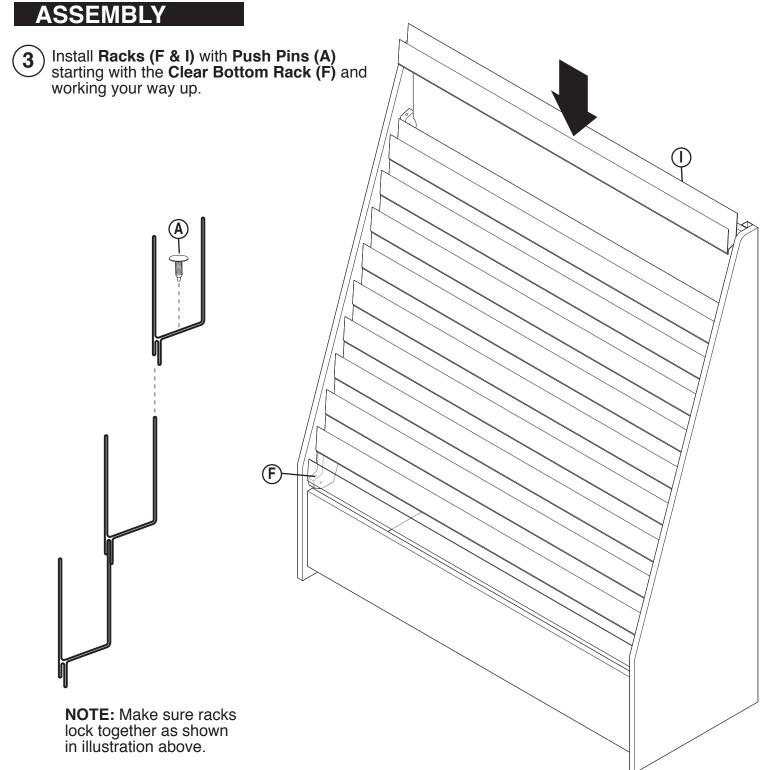

Design & Manufacture

ASSEMBLY

Install 5-Tier Divider Strips (K) in bottom 10 racks on Racks (F & I). Then install 2-Tier Divider Strips (J) in the top 2 racks.

